

NailRIGHT™

SIDING INSTALLATION SYSTEM

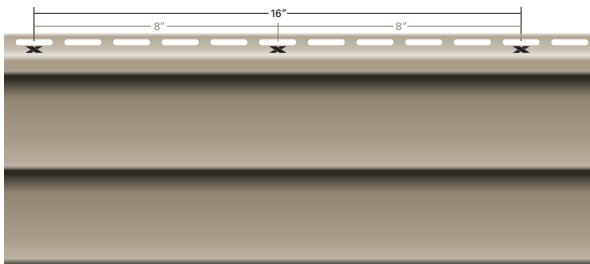


FIGURE A

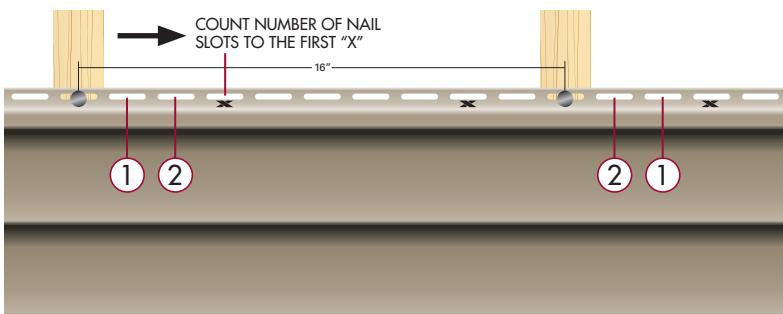


FIGURE B

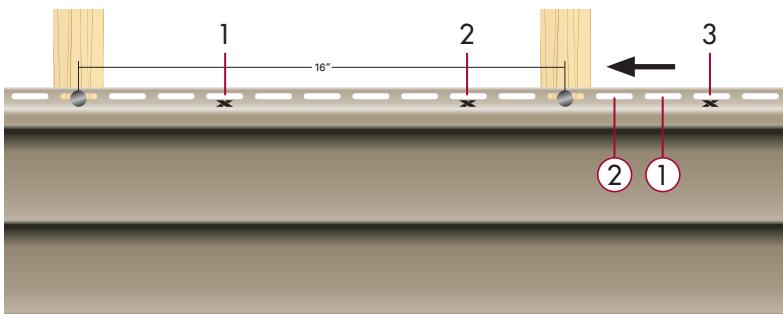


FIGURE C

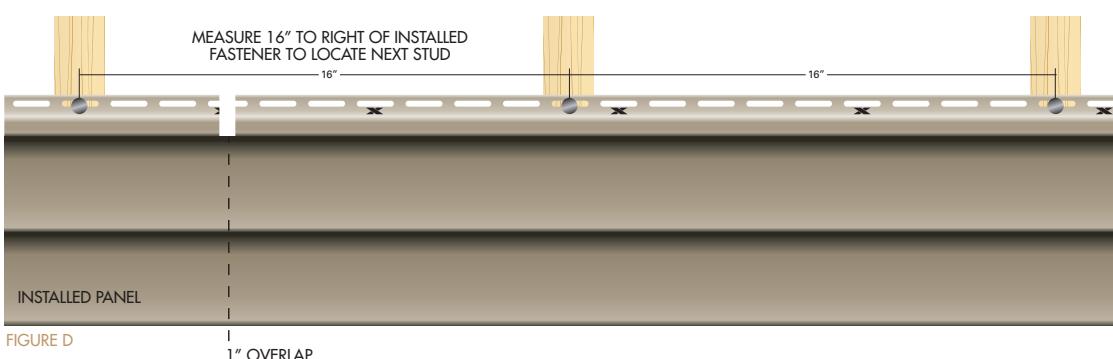


FIGURE D

NOTE: Installation of Vinyl Siding should be performed in accordance with VSI Installation Instructions, available at www.VinylSiding.org.

INSTALLATION INSTRUCTIONS

- 1) Begin by determining if the framing is 16" or 24" on center. Nail slots are positioned 16" and 24" on center to allow for alignment with studs, with the "X" centered every 8" directly under the nail slot (figure a).
- 2) Locate the first stud and fasten nail in the center of the slot (figure b).
- 3) Count the number of slot(s) between the fastener and the first "X" to the right of the panel (figure b).
- 4) To locate the next fastening position (figure c):
 - a. For 16" on center application: Go to the third "X" to the right of the fastener, then count back the number of nail slot(s) noted in step 3. This is the location of the next stud. Repeat for the entire length of the panel.
 - b. For 24" on center application: Go to the fourth "X" to the right of the fastener, then count back the number of nail slot(s) noted in step 3. This is the location of the next stud.
- 5) Repeat step 4 for the entire length of the panel.
- 6) Overlap the next panel half the length of the notch at the end of the panel, or approximately one inch. Measure 16" or 24" (depending on the framing spacing) from the last nail on previous panel to locate the next stud (figure d). Repeat steps 3 and 4 for the entire length of the panel.

NORANDEX™
VINYL SIDING, SOFFIT & ACCESSORIES

1-800-528-0942
www.norandex.com

NailRIGHT™

SIDING INSTALLATION SYSTEM

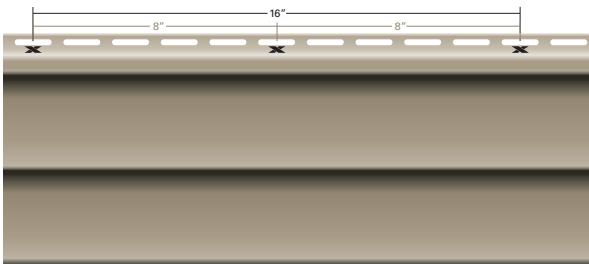


FIGURA A



FIGURA B

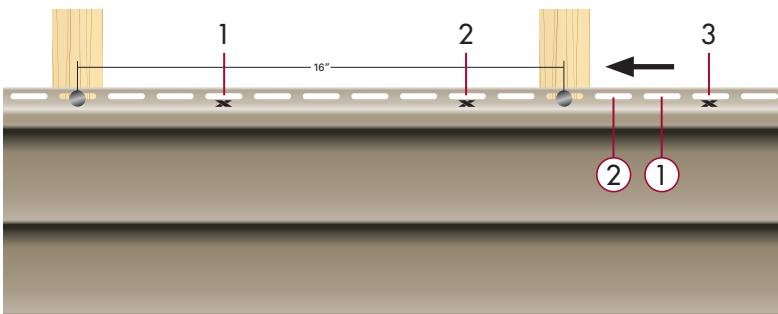


FIGURA C



FIGURA D

INSTRUCCIONES DE INSTALACIÓN

- 1) Comience por determinar si la estructura tiene 16" o 24" en el centro. Las ranuras de clavado están colocadas a 16" y 24" en el centro para dejar que se alineen con las columnas, con las "X" centradas cada 8" directamente bajo la ranura de clavado (figura a).
- 2) Ubique la primera columna y fije el clavo en el centro de la ranura (figura b).
- 3) Cuente el número de ranura(s) entre el sujetador y la primera "X" a la derecha del panel (figura b).
- 4) Para ubicar la siguiente posición de fijación (figura c):
 - a. Para 16" en la aplicación del centro: Vaya a la tercera "X" a la derecha del sujetador, luego cuente el número de ranura(s) de clavado que figuran en el paso 3. Ésta es la ubicación de la próxima columna. Repita a lo largo de todo el panel.
 - b. Para 24" en la aplicación del centro: Vaya a la cuarta "X" a la derecha del sujetador, luego cuente el número de ranura(s) de clavado que figuran en el paso 3. Ésta es la ubicación de la próxima columna.
- 5) Repita el paso 4 a lo largo de todo el panel.
- 6) Superponga el próximo panel a la mitad del largo de la muesca en el extremo del panel, o aproximadamente una pulgada. Mida 16" o 24" (dependiendo del espacio de la estructura) desde el último clavo en el panel previo para ubicar la siguiente columna (figura d). Repita los pasos 3 y 4 a lo largo de todo el panel.

NOTA: La instalación del revestimiento de vinilo se debe realizar de acuerdo a la instalación de VSI. Las instrucciones se encuentran disponibles en www.VinylSiding.org.

 **NORANDEX™**
VINYL SIDING, SOFFIT & ACCESSORIES

1-800-528-0942
www.norandex.com